#### **DEVICE SPECIFICATIONS**

# NI 6366

X Series Data Acquisition 2 MS/s/ch, 8 AI, 24 DIO, 2 AO

The following specifications are typical at 25 °C, unless otherwise noted. For more information about the NI 6366, refer to the *X Series User Manual* available from *ni.com/manuals*.

## **Analog Input**

| Number of channels                  | 8 differential                                    |
|-------------------------------------|---|
| ADC resolution                      | 16 bits   |
| DNL                                 | No missing codes guaranteed                       |
| INL                                 | Refer to the AI Absolute Accuracy section.        |
| Sample rate                         |   |
| Single channel maximum              | 2.00 MS/s   |
| Minimum                             | No minimum  |
| Timing resolution                   | 10 ns   |
| Timing accuracy                     | 50 ppm of sample rate                             |
| Input coupling                      | DC  |
| Input range                         | ±1 V, ±2 V, ±5 V, ±10 V                           |
| Maximum working voltage for all and | alog inputs                                       |
| Positive input (AI+)                | ±11 V for all ranges, Measurement Category I      |
| Negative input (AI-)                | $\pm 11~V$ for all ranges, Measurement Category I |
|                                     |   |



Caution Do not use for measurements within Categories II, III, and IV.

| CMRR (at 60 Hz) | 75 dB    |
|-----------------|----------|
| Bandwidth       | 1 MHz    |
| THD             | -80 dBFS |





| Input |  |
|-------|--|
|       |  |
|       |  |

| input impedance                             |  |
|---|--|
| Device on                                   |  |
| AI+ to AI GND                               | $>$ 100 G $\Omega$ in parallel with 100 pF |
| AI- to AI GND                               | $>$ 100 G $\Omega$ in parallel with 100 pF |
| Device off                                  |  |
| AI+ to AI GND                               | 2 kΩ                                       |
| AI- to AI GND                               | $2~\mathrm{k}\Omega$                       |
| Input bias current                          | ±10 pA                                     |
| Crosstalk (at 100 kHz)                      |  |
| Adjacent channels                           | -80 dB                                     |
| Non-adjacent channels                       | -100 dB                                    |
| Input FIFO size                             |  |
| PXIe  | 8,182 samples shared among channels used   |
| USB (32 MS)                                 | 32 MS shared among channels used           |
| USB (64 MS)                                 | 64 MS shared among channels used           |
| Data transfers                              |  |
| PXIe  | DMA (scatter-gather), programmed I/O       |
| USB   | USB Signal Stream, programmed I/O          |
| Overvoltage protection for all analog inp   | out channels                               |
| Device on                                   | ±36 V                                      |
| Device off                                  | ±15 V                                      |
| Input current during overvoltage conditions | ±20 mA max/AI pin                          |

## **Analog Triggers**

| Number of triggers | 1  |
|--------------------|--|
| Source             | AI <07>, APFI 0  |
| Functions          | Start Trigger, Reference Trigger, Pause<br>Trigger, Sample Clock, Sample Clock<br>Timebase |
| Source level       |  |
| AI <07>            | ±Full scale  |
| APFI 0             | ±10 V  |
| Resolution         | 16 bits  |

| Modes                  | Analog edge triggering, analog edge triggering with hysteresis, and analog window triggering |
|------------------------|--|
| Bandwidth (-3 dB)      |  |
| AI <07>                | 3.4 MHz  |
| APFI 0                 | 3.9 MHz  |
| Accuracy               | ±1% of range   |
| APFI 0 characteristics |  |
| Input impedance        | 10 kΩ  |
| Coupling               | DC   |
| Protection, power on   | ±30 V  |
| Protection, power off  | ±15 V  |

### Al Absolute Accuracy

Table 1. Al Absolute Accuracy

| Nominal<br>Range<br>Positive Full<br>Scale | Nominal<br>Range<br>Negative Full<br>Scale | Residual<br>Gain Error<br>(ppm of<br>Reading) | Offset<br>Tempco<br>(ppm of<br>Range/°C) | Random<br>Noise, σ<br>(μVrms) | Absolute<br>Accuracy at<br>Full Scale<br>(µV) |
|--|--|---|--|-------------------------------|---|
| 10   | -10  | 114   | 35                                       | 252                           | 2,688   |
| 5  | -5   | 120   | 36                                       | 134                           | 1,379   |
| 2  | -2   | 120   | 42                                       | 71                            | 564   |
| 1  | -1   | 138   | 50                                       | 61                            | 313   |



**Note** For more information about absolute accuracy at full scale, refer to the *AI* Absolute Accuracy Example section.

| Gain tempco           | 8 ppm/°C        |
|-----------------------|-----------------|
| Reference tempco      | 5 ppm/°C        |
| Residual offset error | 15 ppm of range |
| INL error             | 46 ppm of range |



Note Accuracies listed are valid for up to two years from the device external calibration.

#### Al Absolute Accuracy Equation

AbsoluteAccuracy = Reading · (GainError) + Range · (OffsetError) + NoiseUncertainty GainError = ResidualGainError + GainTempco · (TempChangeFromLastInternalCal) + ReferenceTempco · (TempChangeFromLastExternalCal) OffsetError = ResidualOffsetError + OffsetTempco · (TempChangeFromLastInternalCal) + INLError NoiseUncertainty =  $\frac{\text{Random Noise} \cdot 3}{\sqrt{10,000}}$  for a coverage factor of 3  $\sigma$  and averaging 10,000 points.

#### Al Absolute Accuracy Example

Absolute accuracy at full scale on the analog input channels is determined using the following assumptions:

- $TempChangeFromLastExternalCal = 10 \, ^{\circ}C$
- $TempChangeFromLastInternalCal = 1 \degree C$
- $number\ of\ readings = 10,000$
- $CoverageFactor = 3 \sigma$

For example, on the 10 V range, the absolute accuracy at full scale is as follows:

$$\begin{aligned} \textit{GainError} &= 114 \text{ ppm} + 8 \text{ ppm} \cdot 1 + 5 \text{ ppm} \cdot 10 = 172 \text{ ppm} \\ \textit{OffsetError} &= 15 \text{ ppm} + 35 \text{ ppm} \cdot 1 + 46 \text{ ppm} = 96 \text{ ppm} \\ \textit{Noise Uncertainty} &= \frac{252 \, \mu \text{V} \cdot 3}{\sqrt{10,000}} = 7.6 \, \mu \text{V} \\ \textit{AbsoluteAccuracy} &= 10 \, \text{V} \cdot (\textit{GainError}) + 10 \, \text{V} \cdot (\textit{OffsetError}) + \textit{NoiseUncertainty} = 2688 \, \mu \text{V} \end{aligned}$$

### **Analog Output**

| Number of channels                 | 2  |
|------------------------------------|--|
| DAC resolution                     | 16 bits                                    |
| DNL                                | ±1 LSB, max                                |
| Monotonicity                       | 16 bit guaranteed                          |
| Accuracy                           | Refer to the AO Absolute Accuracy section. |
| Maximum update rate (simultaneous) |  |
| 1 channel                          | 3.3 MS/s                                   |
| 2 channels                         | 3.3 MS/s                                   |
| Minimum update rate                | No minimum                                 |
| Timing accuracy                    | 50 ppm of sample rate                      |
|                                    |  |


| Timing resolution                                 | 10 ns  |
|---|--|
| Output range                                      | $\pm 10$ V, $\pm 5$ V, $\pm external$ reference on APFI 0  |
| Output coupling                                   | DC   |
| Output impedance                                  | 0.4 Ω  |
| Output current drive                              | ±5 mA  |
| Overdrive protection                              | ±25 V  |
| Overdrive current                                 | 10 mA  |
| Power-on state                                    | ±5 mV  |
| Power on/off glitch                               |  |
| PXIe  | 1.5 V peak for 200 ms  |
| USB   | 1.5 V peak for 200 ms, typical behavior <sup>1</sup>   |
| Output FIFO size                                  | 8,191 samples shared among channels used   |
| Data transfers                                    |  |
| PXIe  | DMA (scatter-gather), programmed I/O   |
| USB   | USB Signal Stream, programmed I/O  |
| AO waveform modes                                 | Non-periodic waveform, periodic waveform regeneration mode from onboard FIFO, periodic waveform regeneration from host buffer including dynamic update |
| Settling time, full-scale step,<br>15 ppm (1 LSB) | 2 μs   |
| Slew rate   | 20 V/μs  |
| Glitch energy at midscale transition, ±10 V range | 6 nV·s   |
| External Reference                                |  |
| APFI 0 characteristics                            |  |
| Input impedance                                   | 10 kΩ  |
| Coupling  | DC   |
| Protection, device on                             | ±30 V  |
| Protection, device off                            | ± 15 V   |
|   |  |

<sup>&</sup>lt;sup>1</sup> Time period may be longer due to host system USB performance. Time period will be longer during firmware updates.

Range  $\pm 11 \text{ V}$ 

Slew rate  $\pm 20 \text{ V/}\mu\text{s}$ 

Figure 1. Analog Output External Reference Bandwidth

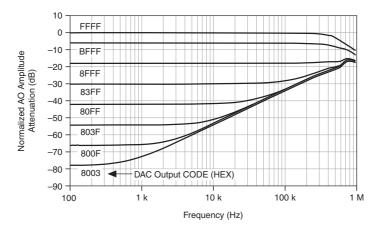

#### **AO Absolute Accuracy**

Absolute accuracy at full-scale numbers is valid immediately following self calibration and assumes the device is operating within 10 °C of the last external calibration.

Table 2. AO Absolute Accuracy

| Nominal<br>Range<br>Positive<br>Full<br>Scale | Nominal<br>Range<br>Negative<br>Full<br>Scale | Residual<br>Gain<br>Error<br>(ppm of<br>Reading) | Gain<br>Tempco<br>(ppm/°C) | Reference<br>Tempco<br>(ppm/°C) | Residual<br>Offset<br>Error<br>(ppm of<br>Range) | Offset<br>Tempco<br>(ppm of<br>Range/<br>°C) | INL<br>Error<br>(ppm<br>of<br>Range) | Absolute<br>Accuracy<br>at Full<br>Scale<br>(µV) |
|---|---|--|----------------------------|---------------------------------|--|--|--------------------------------------|--|
|   |   |  |                            | _                               |  |  |                                      |  |
| 10  | -10   | 129  | 17                         | 5                               | 65   | 1  | 64                                   | 3,256  |



**Note** Accuracies listed are valid for up to two years from the device external calibration

#### **AO Absolute Accuracy Equation**

 $AbsoluteAccuracy = OutputValue \cdot (GainError) + Range \cdot (OffsetError)$ 

 $GainError = ResidualGainError + GainTempco \cdot (TempChangeFromLastInternalCal) + ReferenceTempco \cdot (TempChangeFromLastExternalCal)$ 

 $O\!f\!f\!setError = Residual O\!f\!f\!setError + O\!f\!f\!setTempco \cdot (TempChangeFromLastInternalCal)$ 

+ INLError

## Digital I/O/PFI

#### Static Characteristics

| Number of channels       | 24 total, 8 (P0.<07>),<br>16 (PFI <07>/P1, PFI <815>/P2)   |
|--------------------------|--|
| Ground reference         | D GND  |
| Direction control        | Each terminal individually programmable as input or output |
| Pull-down resistor       | 50 kΩ typical, $20$ kΩ minimum                             |
| Input voltage protection | ±20 V on up to two pins                                    |



Caution Stresses beyond those listed under the Input voltage protection specification may cause permanent damage to the device.

## Waveform Characteristics (Port 0 Only)

| Terminals used                 | Port 0 (P0.<07>)                               |
|--------------------------------|--|
| Port/sample size               | Up to 8 bits                                   |
| Waveform generation (DO) FIFO  | 2,047 samples                                  |
| Waveform acquisition (DI) FIFO | 255 samples                                    |
| DI Sample Clock frequency      |  |
| PXIe                           | 0 to 10 MHz, system and bus activity dependent |
| USB                            | 0 to 1 MHz, system and bus activity dependent  |
| DO Sample Clock frequency      |  |
| PXIe                           |  |
| Regenerate from FIFO           | 0 to 10 MHz                                    |
| Streaming from memory          | 0 to 10 MHz, system and bus activity dependent |
| USB                            |  |
| Regenerate from FIFO           | 0 to 10 MHz                                    |
| Streaming from memory          | 0 to 1 MHz, system and bus activity dependent  |
| Data transfers                 |  |
| PXIe                           | DMA (scatter-gather), programmed I/O           |
| USB                            | USB Signal Stream, programmed I/O              |
| Digital line filter settings   | 160 ns, 10.24 μs, 5.12 ms, disable             |

## PFI/Port 1/Port 2 Functionality

| Functionality            | Static digital input, static digital output, timing input, timing output                                       |
|--------------------------|--|
| Timing output sources    | Many AI, AO, counter, DI, DO timing signals  |
| Debounce filter settings | 90 ns, 5.12 μs, 2.56 ms, custom interval, disable; programmable high and low transitions; selectable per input |

## **Recommended Operating Conditions**

| Input high voltage (V <sub>IH</sub> )  |                |  |
|--|----------------|--|
| Minimum                                | 2.2 V          |  |
| Maximum                                | 5.25 V         |  |
| Input low voltage (V <sub>IL</sub> )   |                |  |
| Minimum                                | 0 V            |  |
| Maximum                                | 0.8 V          |  |
| Output high current (I <sub>OH</sub> ) |                |  |
| P0.<07>                                | -24 mA maximum |  |
| PFI <015>/P1/P2                        | -16 mA maximum |  |
| Output low current (I <sub>OL</sub> )  |                |  |
| P0.<07>                                | 24 mA maximum  |  |
| PFI <015>/P1/P2                        | 16 mA maximum  |  |

## Digital I/O Characteristics

| Positive-going threshold (VT+)                         | 2.2 V maximum  |
|--|----------------|
| Negative-going threshold (VT-)                         | 0.8 V minimum  |
| Delta VT hysteresis (VT+ - VT-)                        | 0.2 V minimum  |
| $I_{IL}$ input low current ( $V_{IN} = 0 V$ )          | -10 μA maximum |
| $I_{IH}$ input high current ( $V_{IN} = 5 \text{ V}$ ) | 250 μA maximum |

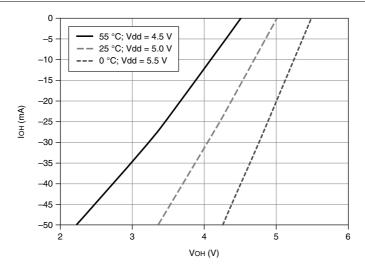
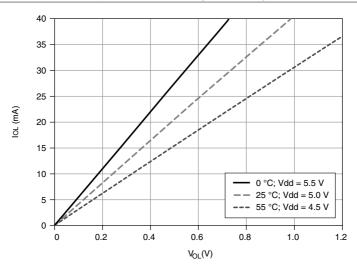


Figure 3. P0.<0..7>:  $I_{OL}$  versus  $V_{OL}$ 




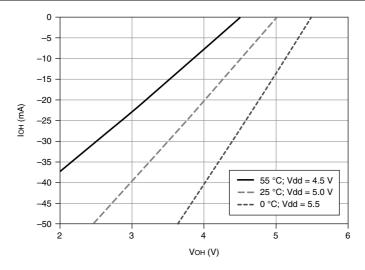


Figure 5. PFI <0..15>/P1/P2: I<sub>OL</sub> versus V<sub>OL</sub>

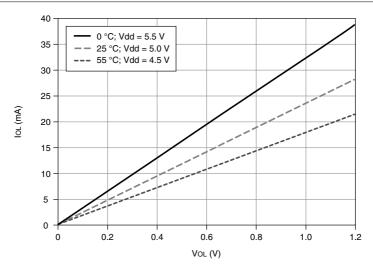

## General-Purpose Counters

| Number of counter/timers | 4       |
|--------------------------|---------|
| Resolution               | 32 bits |

| Counter measurements          | Edge counting, pulse, pulse width, semi-period, period, two-edge separation                |
|-------------------------------|--|
| Position measurements         | X1, X2, X4 quadrature encoding with<br>Channel Z reloading; two-pulse encoding             |
| Output applications           | Pulse, pulse train with dynamic updates, frequency division, equivalent time sampling      |
| Internal base clocks          | 100 MHz, 20 MHz, 100 kHz   |
| External base clock frequency |  |
| PXIe                          | 0 MHz to 25 MHz; 0 MHz to 100 MHz on PXIe_DSTAR <a,b></a,b>                                |
| USB                           | 0 MHz to 25 MHz  |
| Base clock accuracy           | 50 ppm   |
| Inputs                        | Gate, Source, HW_Arm, Aux, A, B, Z,<br>Up_Down, Sample Clock                               |
| Routing options for inputs    |  |
| PXIe                          | Any PFI, PXIe_DSTAR <a,b>, PXI_TRIG, PXI_STAR, analog trigger, many internal signals</a,b> |
| USB                           | Any PFI, analog trigger, many internal signals   |
| FIFO                          | 127 samples per counter  |
| Data transfers                |  |
| PXIe                          | Dedicated scatter-gather DMA controller for each counter/timer, programmed I/O             |
| USB                           | USB Signal Stream, programmed I/O  |

## Frequency Generator

| Number of channels  | 1                       |
|---------------------|-------------------------|
| Base clocks         | 20 MHz, 10 MHz, 100 kHz |
| Divisors            | 1 to 16                 |
| Base clock accuracy | 50 ppm                  |

Output can be available on any PFI terminal.

## Phase-Locked Loop (PLL)

| Number of PLLs 1 |  |
|------------------|--|
|------------------|--|

Table 3. Reference Clock Locking Frequencies

| Reference Signal       | PXI Express Locking Input<br>Frequency (MHz) | USB Locking Input<br>Frequency (MHz) |
|------------------------|--|--------------------------------------|
| PXIe_DSTAR <a,b></a,b> | 10, 20, 100                                  | _                                    |
| PXI_STAR               | 10, 20                                       | _                                    |
| PXIe_CLK100            | 100  | _                                    |
| PXI_TRIG <07>          | 10, 20                                       | _                                    |
| PFI <015>              | 10, 20                                       | 10                                   |

Output of PLL

100 MHz Timebase; other signals derived from 100 MHz Timebase including 20 MHz and 100 kHz Timebases

## **External Digital Triggers**

| Source                                     |  |
|--|--|
| PXIe                                       | Any PFI, PXIe_DSTAR <a,b>, PXI_TRIG, PXI_STAR</a,b>  |
| USB  | Any PFI  |
| Polarity                                   | Software-selectable for most signals   |
| Analog input function                      | Start Trigger, Reference Trigger, Pause<br>Trigger, Sample Clock, Sample Clock<br>Timebase |
| Analog output function                     | Start Trigger, Pause Trigger, Sample Clock,<br>Sample Clock Timebase                       |
| Counter/timer functions                    | Gate, Source, HW_Arm, Aux, A, B, Z, Up_Down, Sample Clock                                  |
| Digital waveform generation (DO) function  | Start Trigger, Pause Trigger, Sample Clock,<br>Sample Clock Timebase                       |
| Digital waveform acquisition (DI) function | Start Trigger, Reference Trigger, Pause<br>Trigger, Sample Clock, Sample Clock<br>Timebase |

## Device-to-Device Trigger Bus

| Input source             |  |
|--------------------------|--|
| PXIe                     | PXI_TRIG <07>, PXI_STAR, PXIe_DSTAR <a,b></a,b>  |
| USB                      | None   |
| Output destination       |  |
| PXIe                     | PXI_TRIG <07>, PXIe_DSTARC   |
| USB                      | None   |
| Output selections        | 10 MHz Clock, frequency generator output, many internal signals  |
| Debounce filter settings | 90 ns, 5.12 µs, 2.56 ms, custom interval, disable; programmable high and low transitions; selectable per input |

### **Bus Interface**

| Form factor        | x1 PXI Express peripheral module, specification rev 1.0 compliant   |
|--------------------|---|
| Slot compatibility | x1 and x4 PXI Express or PXI Express hybrid slots   |
| DMA channels       | 8, can be used for analog input, analog output, digital input, digital output, counter/timer 0, counter/timer 1, counter/timer 2, counter/timer 3 |

All PXIe devices may be installed in PXI Express slots or PXI Express hybrid slots.

| USB               |   |
|-------------------|---|
| USB compatibility | USB 2.0 Hi-Speed or full-speed <sup>2</sup>   |
| USB Signal Stream | 8, can be used for analog input, analog output, digital input, digital output, counter/timer 0, counter/timer 1, counter/timer 2, counter/timer 3 |

<sup>&</sup>lt;sup>2</sup> Operating on a full-speed bus results in lower performance and you might not be able to achieve maximum sampling/update rates.

## Power Requirements



**Caution** The protection provided by the device can be impaired if the device is used in a manner not described in the *X Series User Manual*.

| PXIe                         |   |
|------------------------------|---|
| +3.3 V                       | 4.75 W  |
| +12 V                        | 15.6 W  |
| USB                          |   |
| Power supply requirements    | 11 to 30 VDC, 30 W, 2 positions 3.5 mm pitch pluggable screw terminal with screw locks similar to Phoenix Contact MC 1,5/2-STF-3,5 BK |
| Power input mating connector | Phoenix Contact MC 1,5/2-GF-3,5 BK or equivalent  |



**Caution** The USB device must be powered with an NI offered AC adapter or a National Electric Code (NEC) Class 2 DC source that meets the power requirements for the device and has the appropriate safety certification marks for country of use.

#### **Current Limits**



**Note** Exceeding the current limits may cause unpredictable device behavior.

| PXIe, +5 V terminal (connector 0) | 1 A max <sup>3</sup> |
|-----------------------------------|----------------------|
| USB, +5 V terminal                | 1 A max <sup>3</sup> |

### Physical Characteristics

| PXIe printed circuit board dimensions    | Standard 3U PXI   |  |  |  |  |
|--|---|--|--|--|--|
| USB enclosure dimensions (includes conne | ectors)   |  |  |  |  |
| Mass termination                         | $18.5 \times 17.3 \times 3.6 \text{ cm} (7.3 \times 6.8 \times 1.4 \text{ in.})$  |  |  |  |  |
| Screw terminal                           | $26.4 \times 17.3 \times 3.6 \text{ cm} (10.4 \times 6.8 \times 1.4 \text{ in.})$ |  |  |  |  |
| BNC                                      | $20.3 \times 18.5 \times 6.8 \text{ cm} (8.0 \times 7.3 \times 2.7 \text{ in.})$  |  |  |  |  |
|  |   |  |  |  |  |

<sup>&</sup>lt;sup>3</sup> Has a self-resetting fuse that opens when current exceeds this specification.

#### Weight

| PXI                  | 168 g (5.9 oz)                 |
|----------------------|--------------------------------|
| USB Mass Termination | 967 g (2 lb 2.1 oz)            |
| USB Screw Terminal   | 1.428 kg (3 lb 2.3 oz)         |
| USB BNC              | 1.536 kg (3 lb 6.2 oz)         |
| O connector          |                                |
| PXIe                 | 1 68-pin VHDCI                 |
| USB Mass Termination | 1 68-pin VHDCI                 |
| USB Screw Terminal   | 64 screw terminals             |
| USB BNC              | 20 BNCs and 30 screw terminals |
|                      |                                |

Table 4. PXIe and USB Mass Termination Mating Connectors

| Manufacturer, Part Number | Description  |
|---------------------------|--|
| MOLEX 71430-0011          | 68-Pos Right Angle Single Stack PCB-Mount VHDCI (Receptacle) |
| MOLEX 74337-0016          | 68-Pos Right Angle Dual Stack PCB-Mount VHDCI (Receptacle)   |
| MOLEX 71425-3001          | 68-Pos Offset IDC Cable Connector (Plug) (SHC68-*)           |

USB screw terminal/BNC screw terminal 16-24 AWG wiring

#### Calibration

| Recommended warm-up time | 15 minutes |
|--------------------------|------------|
| Calibration interval     | 2 years    |

## Maximum Working Voltage

Maximum working voltage refers to the signal voltage plus the common-mode voltage.

Channel to earth 11 V, Measurement Category I

Caution Do not use for measurements within Categories II, III, or IV.

#### Shock and Vibration

| Operational shock | 30 g peak, half-sine, 11 ms pulse  |
|-------------------|--|
|                   | (Tested in accordance with IEC 60068-2-27. Test profile developed in accordance with |
|                   | MIL-PRF-28800F.)   |
| Random vibration  |  |
| Operating         | 5 to 500 Hz, $0.3 g_{rms}$   |
| Nonoperating      | 5 to 500 Hz, 2.4 g <sub>rms</sub>  |
|                   | (Tested in accordance with IEC 60068-2-64.   |
|                   | Nonoperating test profile exceeds the  |
|                   | requirements of MIL-PRF-28800F, Class 3.)  |

#### Environmental

| Operating temperature |                             |
|-----------------------|-----------------------------|
| PXIe                  | 0 to 55 °C                  |
| USB                   | 0 to 45 °C                  |
| Storage temperature   | -40 to 70 °C                |
| Operating humidity    | 10 to 90% RH, noncondensing |
| Storage humidity      | 5 to 95% RH, noncondensing  |
| Pollution Degree      | 2                           |
| Maximum altitude      | 2,000 m                     |
|                       |                             |

Indoor use only.

### Safety

This product is designed to meet the requirements of the following electrical equipment safety standards for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



**Note** For UL and other safety certifications, refer to the product label or the *Online* Product Certification section.

### Electromagnetic Compatibility

This product meets the requirements of the following EMC standards for electrical equipment for measurement, control, and laboratory use:

- EN 61326-1 (IEC 61326-1): Class A emissions; Basic immunity
- EN 55011 (CISPR 11): Group 1, Class A emissions
- EN 55022 (CISPR 22): Class A emissions
- EN 55024 (CISPR 24): Immunity
- AS/NZS CISPR 11: Group 1, Class A emissions
- AS/NZS CISPR 22: Class A emissions
- FCC 47 CFR Part 15B: Class A emissions
- ICES-001: Class A emissions



**Note** In the United States (per FCC 47 CFR), Class A equipment is intended for use in commercial, light-industrial, and heavy-industrial locations. In Europe, Canada, Australia and New Zealand (per CISPR 11) Class A equipment is intended for use only in heavy-industrial locations.



**Note** Group 1 equipment (per CISPR 11) is any industrial, scientific, or medical equipment that does not intentionally generate radio frequency energy for the treatment of material or inspection/analysis purposes.



**Note** For EMC declarations and certifications, and additional information, refer to the Online Product Certification section.

# CE Compliance ( €

This product meets the essential requirements of applicable European Directives, as follows:

- 2014/35/EU; Low-Voltage Directive (safety)
- 2014/30/EU; Electromagnetic Compatibility Directive (EMC)

#### Online Product Certification

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/ certification, search by model number or product line, and click the appropriate link in the Certification column.

### **Environmental Management**

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the Minimize Our Environmental Impact web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

### Waste Electrical and Electronic Equipment (WEEE)

**EU Customers** At the end of the product life cycle, all NI products must be X disposed of according to local laws and regulations. For more information about how to recycle NI products in your region, visit ni.com/environment/weee.

#### 电子信息产品污染控制管理办法(中国 RoHS)


中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物 质指令(RoHS)。关于 National Instruments 中国 RoHS 合规性信息,请登录 ni.com/environment/rohs china。 (For information about China RoHS compliance, go to ni.com/environment/rohs china.)

## **Device Pinouts**


Figure 6. NI PXIe-6366 Pinout


| 67<br>66<br>65<br>64<br>63<br>62<br>61<br>60<br>59<br>58<br>57<br>56<br>55<br>54 | 34<br>33<br>32<br>31<br>30<br>29<br>28<br>27<br>26<br>25<br>24<br>23<br>22<br>21 | AI 0-<br>AI 1+<br>AI 1 GND<br>AI 2-<br>AI 3+<br>AI 3 GND<br>AI 4+<br>AI 4 GND<br>AI 5-<br>AI 6+<br>AI 6 GND<br>AI 7-<br>AO 0 |       | TERMIN       |         | CONNICO                      | (AI 0-7)         |       |              |
|--|--|--|-------|--------------|---------|------------------------------|------------------|-------|--------------|
| 67<br>66<br>65<br>64<br>63<br>62<br>61<br>60<br>59<br>58<br>57<br>56<br>55<br>54 | 33<br>32<br>31<br>30<br>29<br>28<br>27<br>26<br>25<br>24<br>23<br>22<br>21<br>20 | Al 1+ Al 1 GND Al 2- Al 3+ Al 3 GND Al 4+ Al 4 GND Al 5- Al 6+ Al 6 GND Al 7- AO 0 AO 1                                      |       | TERMIN       |         | S GOTTO SINING O             | (AI 0-7)         |       |              |
| 66 65 64 63 62 61 60 59 58 57 56 55 54   | 32<br>31<br>30<br>29<br>28<br>27<br>26<br>25<br>24<br>23<br>22<br>21<br>20       | AI 1 GND<br>AI 2-<br>AI 3+<br>AI 3 GND<br>AI 4+<br>AI 4 GND<br>AI 5-<br>AI 6+<br>AI 6 GND<br>AI 7-<br>AO 0                   |       | TERMIN       |         | S GOTTONINGO                 | (Al 0-7)         |       |              |
| 65<br>64<br>63<br>62<br>61<br>60<br>59<br>58<br>57<br>56<br>55                   | 31<br>30<br>29<br>28<br>27<br>26<br>25<br>24<br>23<br>22<br>21<br>20             | AI 2-<br>AI 3+<br>AI 3 GND<br>AI 4+<br>AI 4 GND<br>AI 5-<br>AI 6+<br>AI 6 GND<br>AI 7-<br>AO 0<br>AO 1                       |       | TERMIN       |         | COTOTIVINO                   | (AI 0-7)         |       |              |
| 64<br>63<br>62<br>61<br>60<br>59<br>58<br>57<br>56<br>55                         | 30<br>29<br>28<br>27<br>26<br>25<br>24<br>23<br>22<br>21                         | AI 3+ AI 3 GND AI 4+ AI 4 GND AI 5- AI 6+ AI 6 GND AI 7- AO 0 AO 1   |       | TERMIN       |         | S GOT DIMINOS                | (AI 0-7)         |       |              |
| 63<br>62<br>61<br>60<br>59<br>58<br>57<br>56<br>55<br>54                         | 29<br>28<br>27<br>26<br>25<br>24<br>23<br>22<br>21<br>20                         | Al 3 GND<br>Al 4+<br>Al 4 GND<br>Al 5-<br>Al 6+<br>Al 6 GND<br>Al 7-<br>AO 0<br>AO 1   |       | TERMIN       |         | CONNICTO                     | (AI 0-7)         |       |              |
| 62<br>61<br>60<br>59<br>58<br>57<br>56<br>55<br>54                               | 28<br>27<br>26<br>25<br>24<br>23<br>22<br>21<br>20                               | Al 4+ Al 4 GND Al 5- Al 6+ Al 6 GND Al 7- AO 0 AO 1  |       | TERMIN.      |         |                              | CONNEC<br>(AI 0- |       |              |
| 61<br>60<br>59<br>58<br>57<br>56<br>55<br>54                                     | 27<br>26<br>25<br>24<br>23<br>22<br>21<br>20                                     | AI 4 GND<br>AI 5-<br>AI 6+<br>AI 6 GND<br>AI 7-<br>AO 0<br>AO 1  |       | TERMIN.      |         |                              |                  |       |              |
| 60<br>59<br>58<br>57<br>56<br>55<br>54   | 26<br>25<br>24<br>23<br>22<br>21<br>20   | AI 5-<br>AI 6+<br>AI 6 GND<br>AI 7-<br>AO 0<br>AO 1  |       | TERMIN       |         |                              |                  | 1     |              |
| 59<br>58<br>57<br>56<br>55<br>54   | 25<br>24<br>23<br>22<br>21<br>20   | AI 6+<br>AI 6 GND<br>AI 7-<br>AO 0<br>AO 1   |       | TERMIN       |         |                              |                  |       |              |
| 58<br>57<br>56<br>55<br>54   | 24<br>23<br>22<br>21<br>20   | AI 6 GND<br>AI 7—<br>AO 0<br>AO 1  |       | TERMIN       |         | 100                          | 씱                |       |              |
| 57<br>56<br>55<br>54   | 23<br>22<br>21<br>20   | AI 7-<br>AO 0<br>AO 1  |       | TERMIN       |         | ر ا                          | $\sim$           |       |              |
| 55<br>54   | 21<br>20   | AO 0<br>AO 1   |       | I LI HVIII V | AI 68 — |                              | للمص             |       | - TERMINAL 3 |
| 54   | 20   | AO 1   |       |              | AL 00   |                              |                  |       | TETUVIIVALO  |
| _  | _  | _  |       |              |         |                              |                  |       |              |
| 53   | 40   | APFI 0   |       |              |         |                              |                  |       |              |
|  | 19   | P0.4   |       |              |         |                              |                  |       |              |
| 52   | 18   | D GND  |       |              |         |                              |                  |       |              |
| 51   | 17   | P0.1   |       |              |         |                              |                  |       |              |
| 50   | 16   | P0.6   |       |              |         |                              |                  |       |              |
| 49   | 15   | D GND  |       |              |         |                              |                  |       |              |
| 48   | 14   | +5 V   |       |              |         |                              |                  |       |              |
| 47   | 13   | D GND  |       |              |         |                              |                  |       |              |
| 46   | 12   | D GND  |       | TERMIN       | AL 35 — | — ►                          | 쁘쒸               |       | - TERMINAL 1 |
| 45   | 11   | PFI 0/P1.0   |       |              |         |                              | X                |       |              |
| 44   | 10   | PFI 1/P1.1   |       |              |         | ((                           |                  |       |              |
| 43   | 9  | D GND  |       |              |         | `                            |                  |       |              |
| 42   | 8  | +5 V   |       |              |         |                              |                  |       |              |
| 41   | 7  | D GND  |       |              |         |                              |                  |       |              |
| 40   | 6  | PFI 5/P1.5   |       |              |         |                              |                  |       |              |
| 39   | 5  | PFI 6/P1.6   |       |              |         |                              |                  |       |              |
| 38   | 4  | D GND  |       |              |         |                              |                  |       |              |
| 37   | 3  | PFI 9/P2.1   |       |              |         |                              |                  |       |              |
| 36   | 2  | PFI 12/P2.4  |       |              |         |                              |                  |       |              |
| 35   | 1  | PFI 14/P2.6  |       |              |         |                              |                  |       |              |
|  | 48<br>47<br>46<br>45<br>44<br>44<br>41<br>40<br>39<br>38<br>37<br>36             | 48 14<br>47 13<br>46 12<br>45 11<br>44 10<br>43 9<br>42 8<br>41 7<br>40 6<br>39 5<br>38 4<br>37 3<br>36 2                    | 48 14 | 48 14        | 48 14   | 48 14   45 V   47 13   D GND | 48 14            | 48 14 | 48 14        |

NC = No Connect

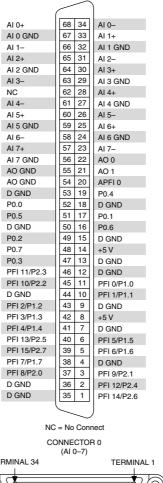

**TERMINAL 34 TERMINAL 68 TERMINAL 35** 

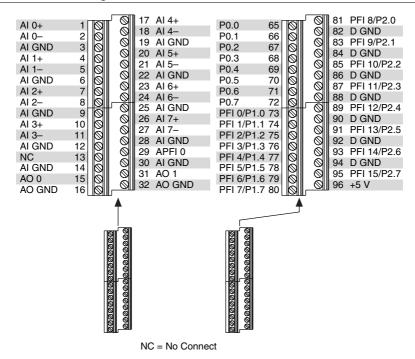

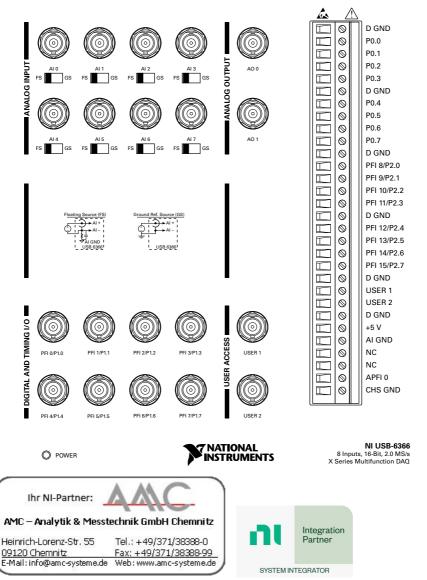

Refer to the *NI Trademarks and Logo Guidelines* at ni.com/trademarks for information on NI trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering NI products/technology, refer to the appropriate location: *Help»Patents* in your software, the patents.txt file on your media, or the *National Instruments Patent Notice* at ni.com/patents. You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the *Export Compliance Information* at ni.com/legal/export-compliance for the NI global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-714, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2015—2016 National Instruments. All rights reserved.